
PAC-150 90° - PLYWOOD DECK DETAILS

INSIDE CORNER DETAIL

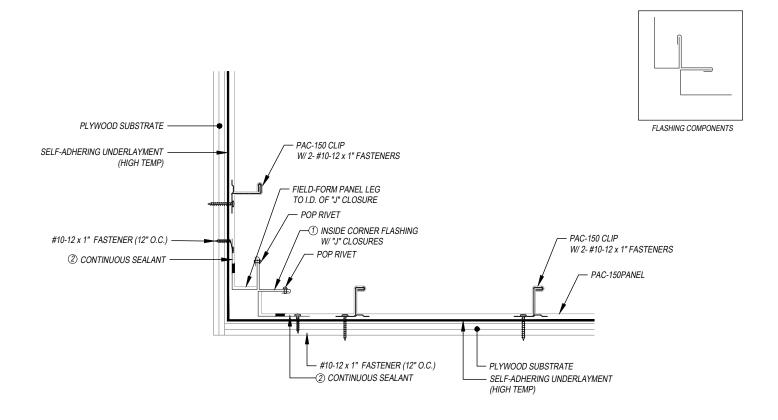

KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN.
- CLIPS AND FASTENERS MATERIAL: GALVANIZED WHEN STEEL PANELS ARE UTILIZED; STAINLESS STEEL WHEN ALUMINUM PANELS ARE UTILIZED.
- ① INSIDE CORNER FLASHING
 - PANEL LEG MUST BE FORMED TO WITHIN 1/8" OF J-CHANNEL WEB.
 - DECK SIDE LEG SHOULD BE A MINIMUM OF 3" LONG WITH FASTENER LOCATED 2" MAXIMUM FROM EDGE.
 - J-CHANNEL FORMED TO HEIGHT OF PANEL RIB.
- ② SEALANT CAN BE TUBE OR TAPE SEALANT AND MUST BE CONTINUOUS.

Job Name		Contractor
Date	Notes	

PETERSEN ALUMINUM CORPORATION

PAC-CLAD.COM SALES@PETERSENMAIL.COM