


BOARD AND BATTEN - WOOD SUBSTRATE DETAILS WALL TO SOFFIT - OPTION 2 DETAIL VERTICAL APPLICATION

~~~			
BOARD AND	BATTEN	PANEL	

## KEYNOTES:

- FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH
- FASTENER SPACING VARIES BASED ON PROJECT SPECIFIC LOADS AND/OR LOCAL BUILDING CODES
- THIS DETAIL DRAWING IS APPLICABLE TO ALL BOARD AND BATTEN WALL PANEL WIDTHS

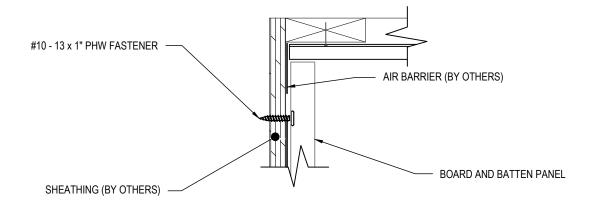



DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY

## PETERSEN ALUMINUM CORPORATION - PAC-CLAD.COM

HQ: 1005 Tonne Road Elk Grove Village, IL 60007 P: 800-PAC-CLAD F: 800-722-7150 9060 Junction Drive Annapolis Junction, MD 20701 P: 800-344-1400 F: 301-953-7627 10551 PAC Road Tyler, TX 75707 P: 800-441-8661 F: 903-581-8592 102 Northpoint Parkway Acworth, GA 30102 P: 800-272-4482 F: 770-420-2533

SALES@PETERSENMAIL.COM

1800 S. 7th Ave., Suite 130 Phoenix, AZ 85007 P: 833-750-1935 F: 602-254-6504 9817 233rd Ave. E, Suite A Bonney Lake, WA 98391 P: 253-501-2450 F: N/A