




## SLOPE CHANGE - OPTION 1 (STEEP SLOPE TO LOW SLOPE)



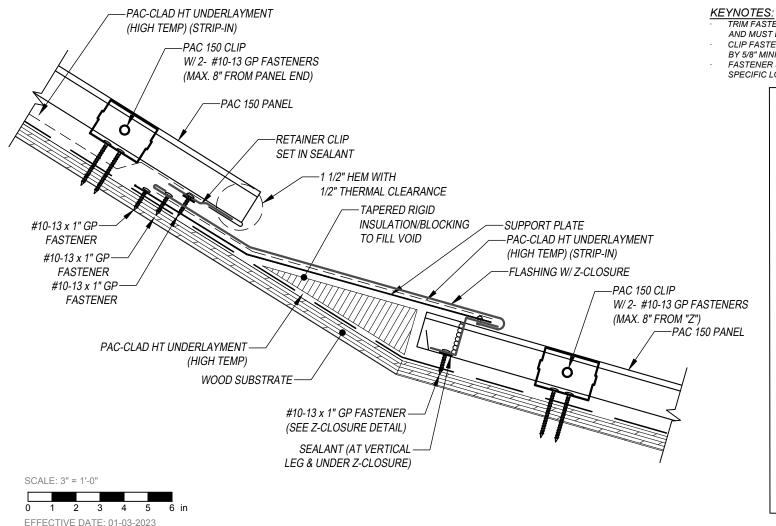

- TRIM FASTENERS ARE SELF-TAPPING PANCAKE HEAD AND MUST BE INSTALLED IN A STAGGERED PATTERN
- · CLIP FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH
- FASTENER SPACING VARIES BASED ON PROJECT SPECIFIC LOADS AND/OR LOCAL BUILDING CODES

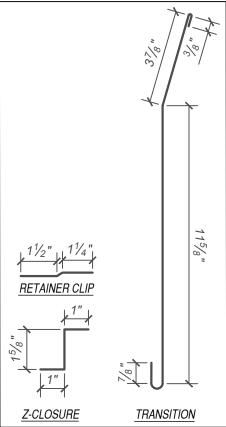

FLASHINGS

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY, ACTUAL PROJECT DETAIL MAY VARY

SUBJECT TO CHANGE WITHOUT NOTICE

SALES@PETERSENMAIL.COM